



ASSEMBLY  
INSTRUCTION 83296 SIDEBORD OXY

KARE  
DESIGN

(1) x1

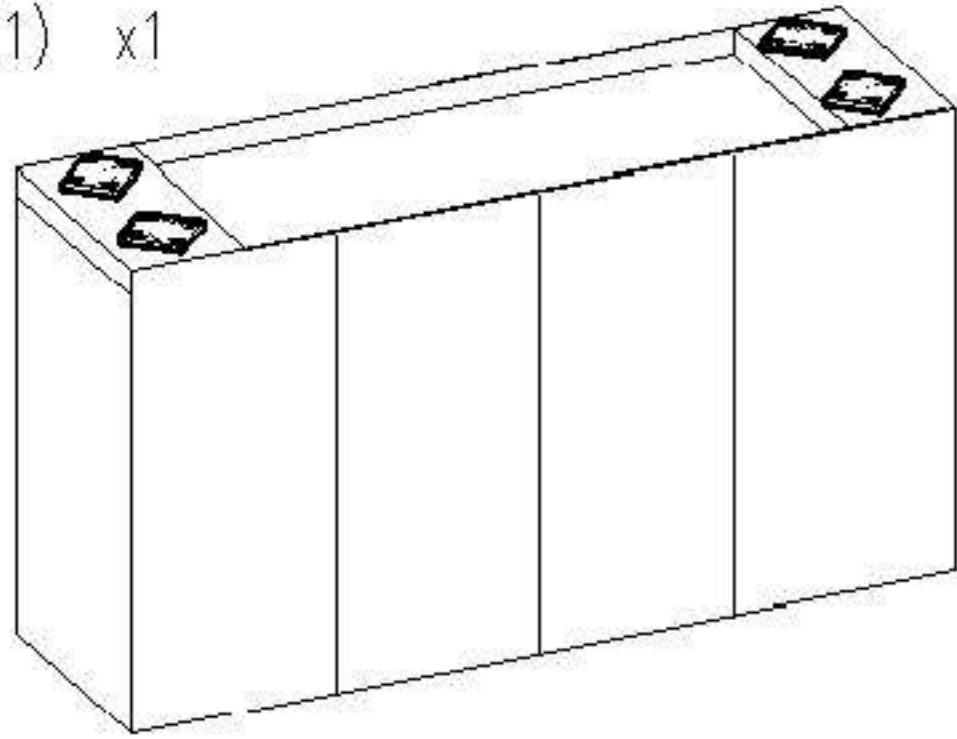


①

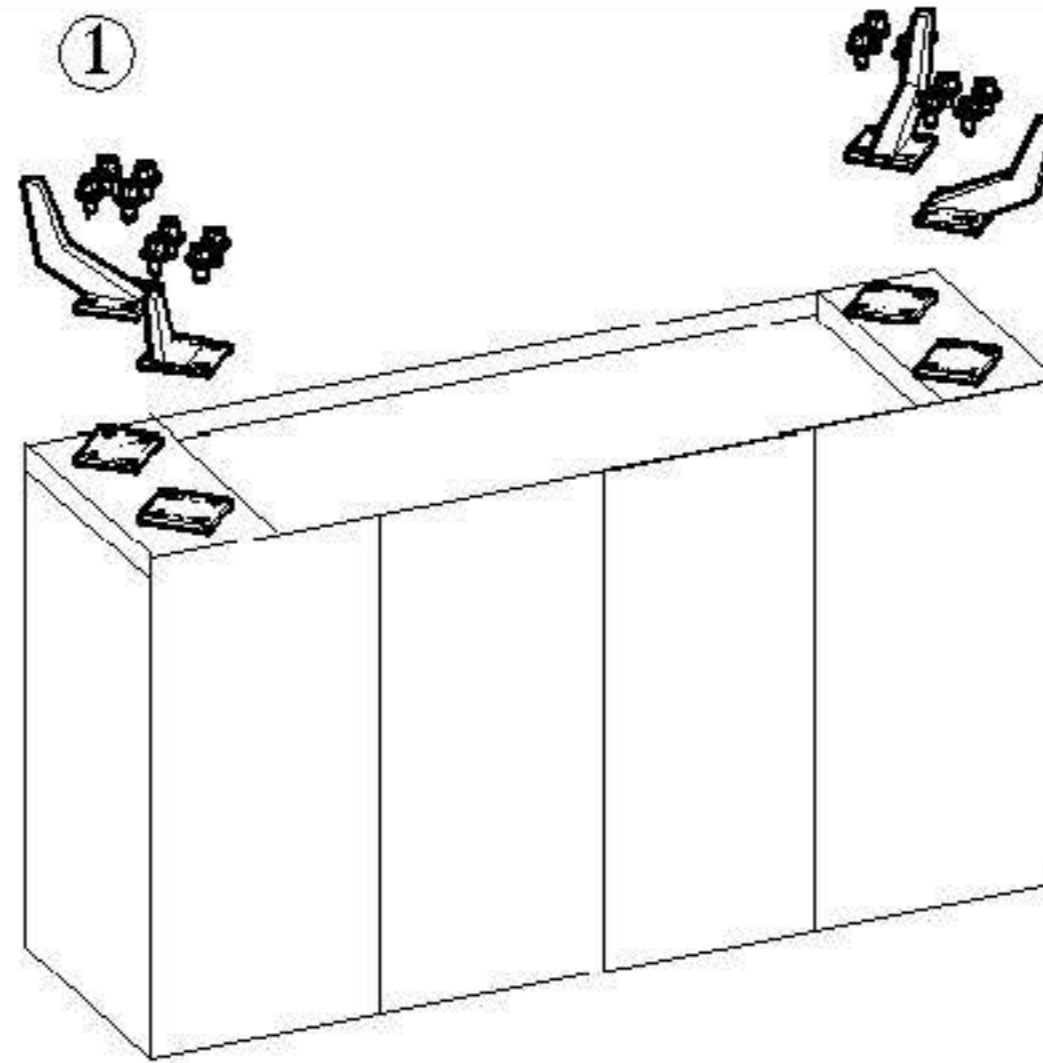


(2) x4



(3) x16

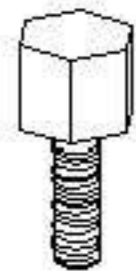


②

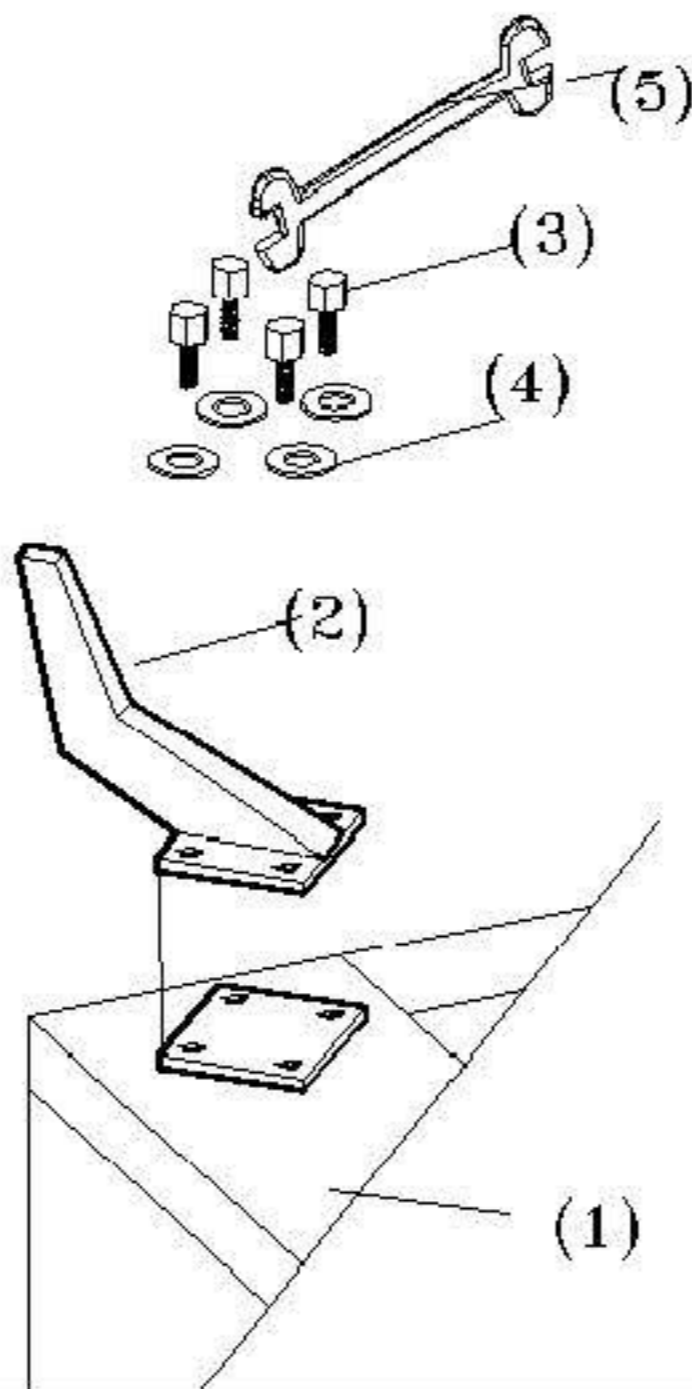


(4) x16



(5) x1

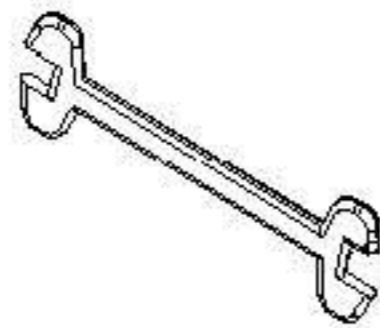

③

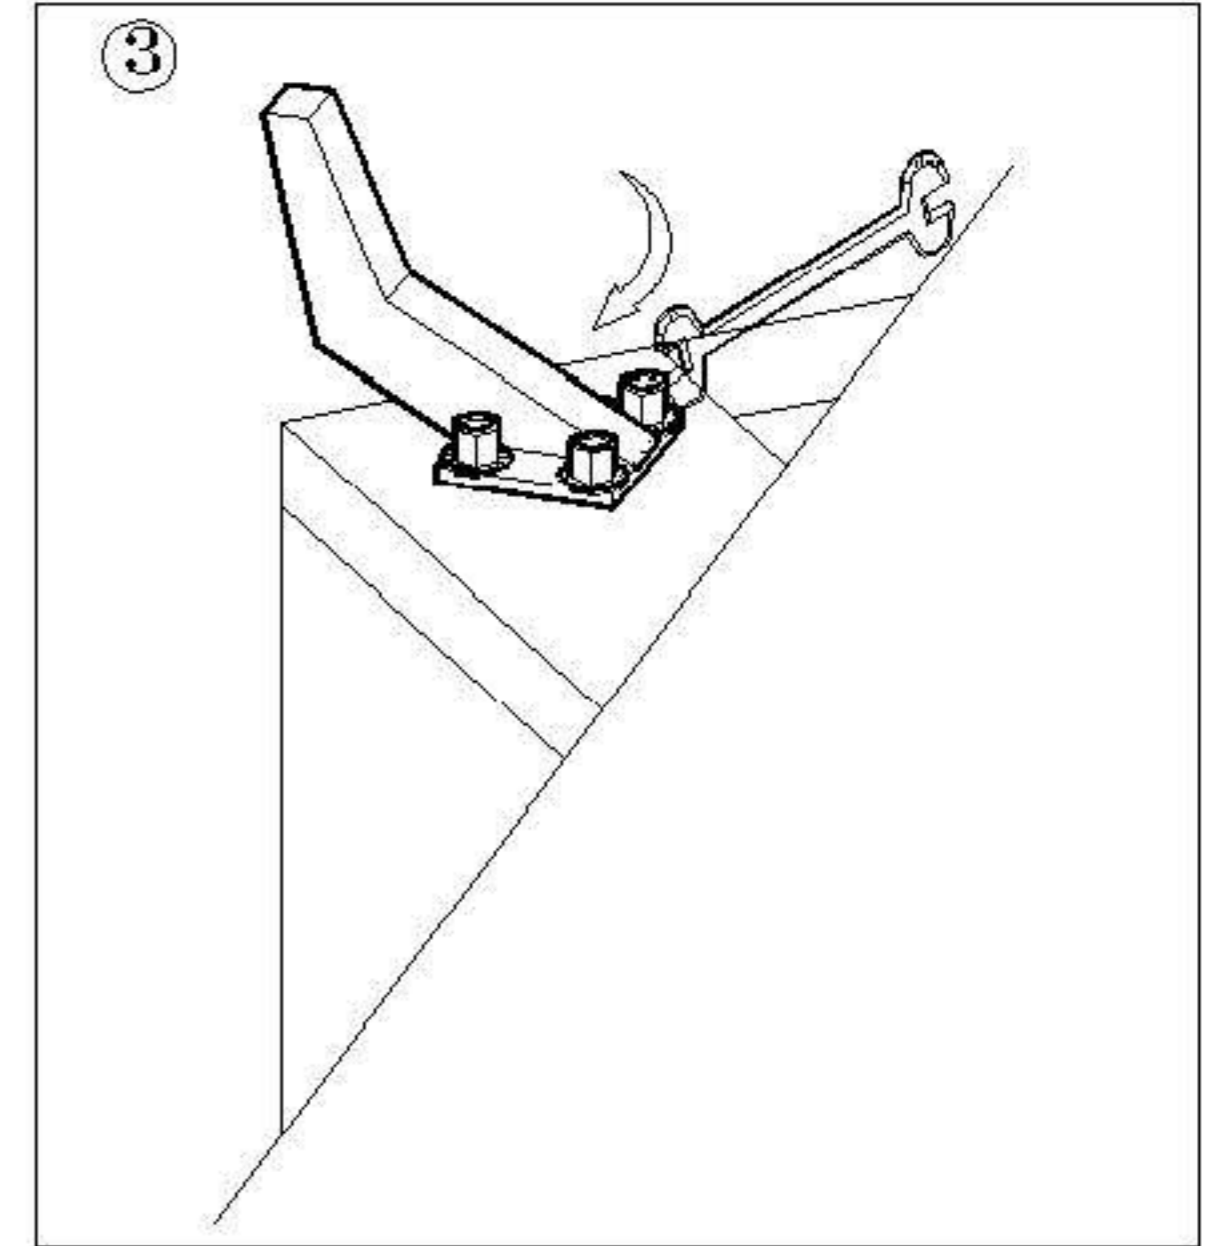

④

