


Assembly Instruction

84377 – (PE-4772) L GROVE SIDE BOARD 3DOPOR 164 X 40 X 80 cm

KARE
DESIGN

Parts

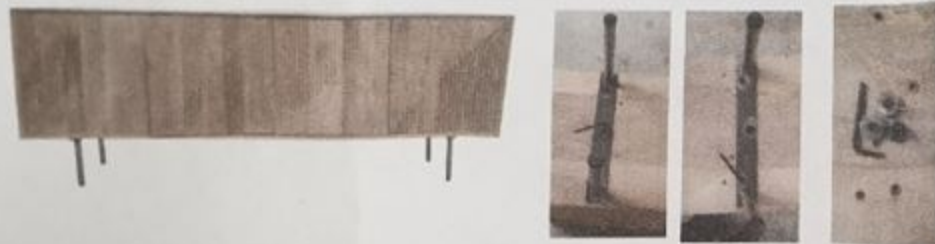


This assembly required
two people

Step 1



Step 2

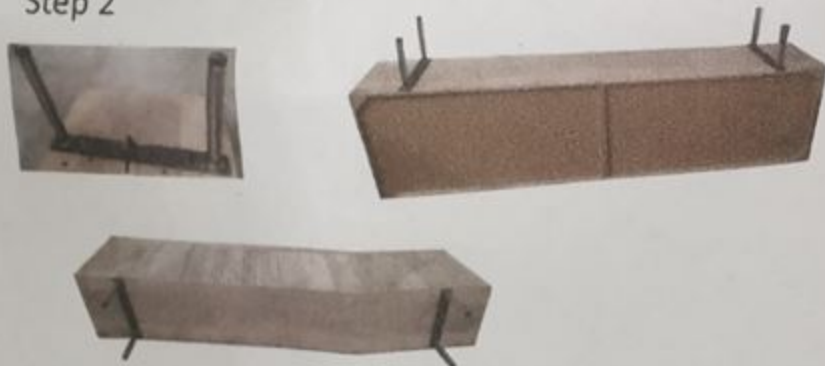

Step 3



Code	Description	Qty
1	Iron Base D nut	06
2	Alan Key	01
3	IRON LEG	02